


# HOZELOCK

## AC1+

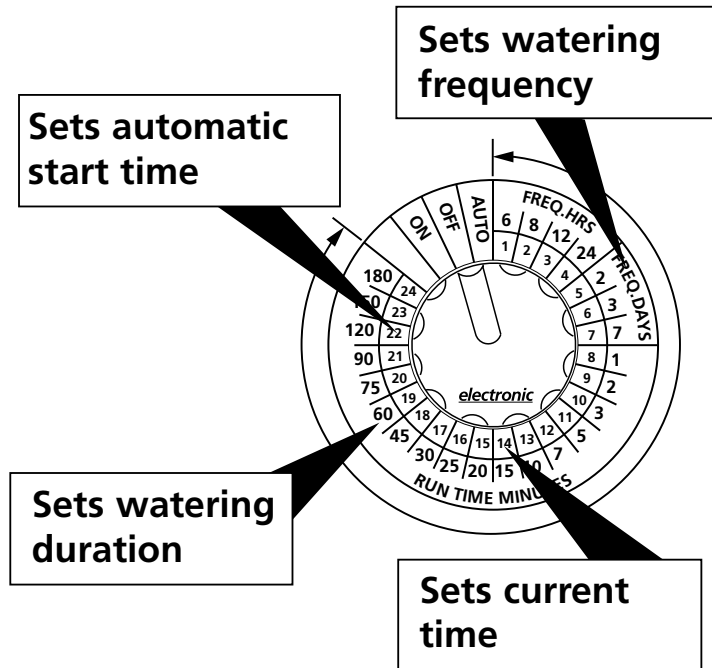

Please follow the instructions to make sure that you get the most from your timer for simple and efficient watering.

### INSTALLING THE BATTERIES

You **must** use Alkaline batteries - alternatives will result in incorrect operation.

1. Remove screws and back cover.
2. Insert two 1.5V 'C' Alkaline batteries. (Check + and - are correct.). IMPORTANT: Rechargeable batteries must not be used.
3. Replace batteries each season. (max 12 months use)

### MAINTAINING THE WATERPROOF SEAL

1. Ensure that rubber seal is positioned correctly.
2. Replace back cover and screw down tightly.
3. Repeat each time back cover is removed.

### HOW TO PROGRAMME THE TIMER

There are two watering operations - Automatic and Manual.

#### AUTOMATIC OPERATION

##### 1. Set the current time

Turn dial to the nearest hour on the **Grey** scale (24 hour clock) then press the **S** button. An audible beep confirms correct setting.

##### 2. Set the watering start time

Turn dial to the nearest hour to your desired start time on the **Grey** scale (24 hour clock) then press the **S** button. An audible beep confirms correct setting.

##### 3. Set the watering frequency

This can be set in hours (every 6, 8, 12, or 24 hours) or it can be set in days (every 2, 3 or 7 days). Turn dial to desired setting on the **Green** scale and then press the **Green** button. An audible beep confirms correct setting.

##### 4. Set the watering duration

Turn dial to number of watering minutes required on the **Blue** scale and then press the **Blue** button. An audible beep confirms correct setting.

5. Turn dial to **AUTO** to start the selected programme.

##### Automatic OFF

Turn dial to **ON** or **OFF**.

If you wish to return to Automatic watering re-select **AUTO**.

Changing current time, start time, watering

Sets watering frequency

Sets automatic start time

Sets watering duration

Sets current time

### frequency or duration

Turn dial to desired setting and press the relevant button as instructed above.

NOTE: You do **not** need to reset all settings.

### MANUAL OPERATION

#### Manual ON

Turn dial anti-clockwise to **ON**.

Water will flow for 60 minutes maximum or until turned to **OFF** setting.

Note: After 60 minutes water shuts off. Knob will still point to **ON** and needs to be manually set to **OFF** or to desired number of automatic watering minutes.

#### Manual OFF

Turn dial clockwise to **OFF**.

Note: Operation is only audible when valve opens and closes. To check that timer is working, switch to manual **ON** or **OFF** to hear valve operate.

### CONNECTING THE TIMER TO THE TAP

Use supplied adaptors if required. Tighten to ensure no leaks.

### PROBLEM SOLVING

PROBLEM	SOLUTION
Valve opens and closes when batteries are first inserted but then fails to operate when dial is at <b>ON</b> or <b>OFF</b> .	Your AC1 has detected poor batteries. Replace with new <b>ALKALINE</b> batteries.
Valve works but no water flows.	Check tap is turned on.
Valve works on manual but no automatic watering.	Set <b>Auto Start</b> time
Knob points to <b>ON</b> but no watering.	Manual <b>ON</b> 60 minutes is finished. Switch off or turn to desired automatic watering time.